



HIGH IMPACT STEEL FRONT BUMPER INSTALLATION MANUAL



For technical support , please write us to:
info@afxmotorsports.com or call us at:
Ph. 956-242-6521

HAVE FUN AND A SAFE RIDE!



www.afxmotorsports.com
4610 Modern Lane, Laredo, TX 78041 Ph. 956-242-6521

THIS PRODUCT IS FOR OFF ROAD USE ONLY

**CAN AM X3
2 SEATER**

SKU DEF034

THANK YOU!


FOR PURCHASING AT AFX MOTORSPORTS




HIGH IMPACT STEEL FRONT BUMPER FOR CAN AM X3 2 SEATER

HOW TO INSTALL

Pieces included:

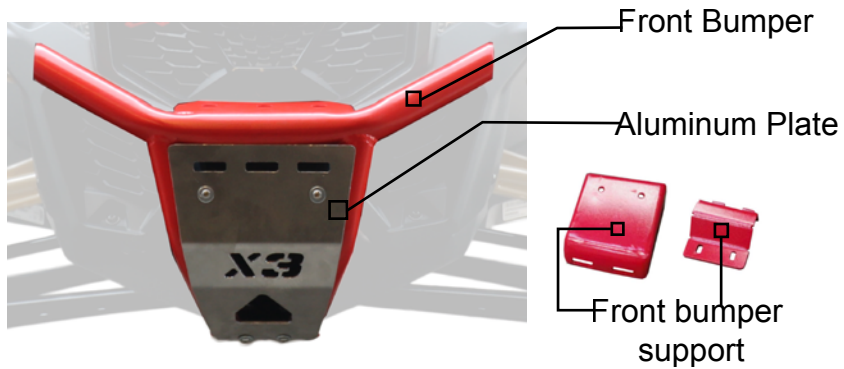

-  (2x) 1/4 x 2" Bolts with washers and nuts.
- (2x) 1/4 x 1" Bolts with washer and nuts.
- (2x) 10mm x 30mm Bolts.


Tools needed (Not Included):

- 5/32" Allen Key.
- 7/16" or 14 mm Combination Wrench.

Liability Statement

AFX Motorsports products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by AFX Motorsports and is not recommended. AFX Motorsports products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact AFX Motorsports to verify that they will work together. Although AFX Motorsports has thousands of satisfied customers, user should be aware that installing bumpers, rock sliders, spare tire carriers, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. AFX Motorsports urges operators and occupants to wear a helmet and appropriate riding gear at all times. By purchasing and installing AFX Motorsports products, user agrees that should damages occur, AFX Motorsports will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. AFX Motorsports, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from AFX Motorsports. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim. AFX Motorsports will warranty only parts provided by AFX Motorsports. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by AFX Motorsports. AFX Motorsports parts and products are not warrantied if item was not installed properly, misused, or modified.

- 1** Remove the 2 screws of the bottom part of the vehicle (as it is shown in the image).

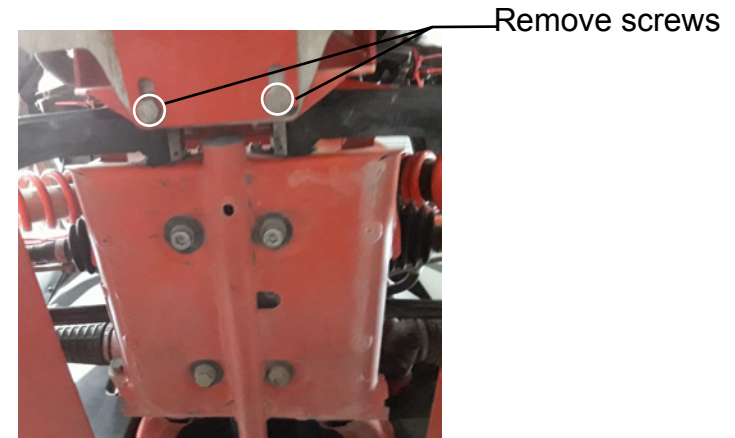


- 2** Remove the Aluminum plate with a 5/32" allen key.


- 3** Place the front upper support on the front tube of the vehicle (as it is shown in the image).




4 Assemble the front lower support, using the support slots, embrace the frontal tube of the vehicle (as it is shown in the image).

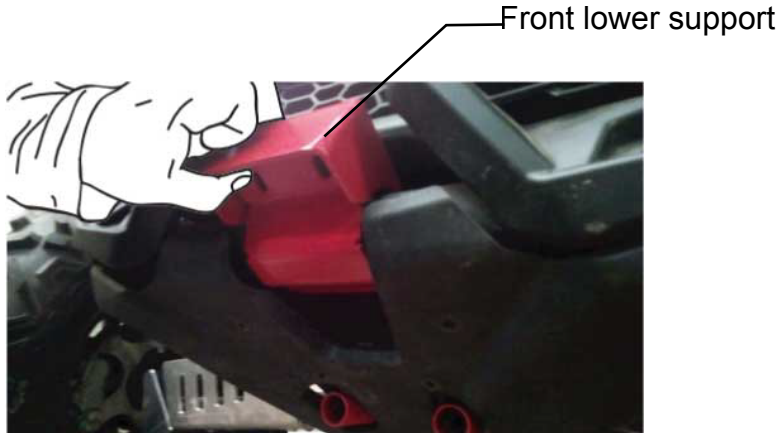


5 Mount the bumper above frontal support, align the perforations. (as it is shown in the image). Use two 1/4 x 2" screw with washer and nuts.

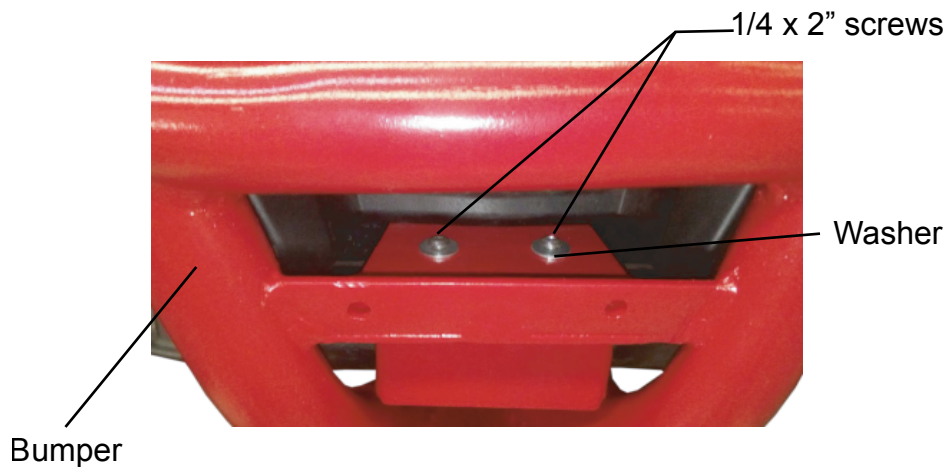

6 Align the bottom of the bumper with the perforations of the screws removed in step #1 (as it is shown in the image). Use two 10 x 30mm screw.

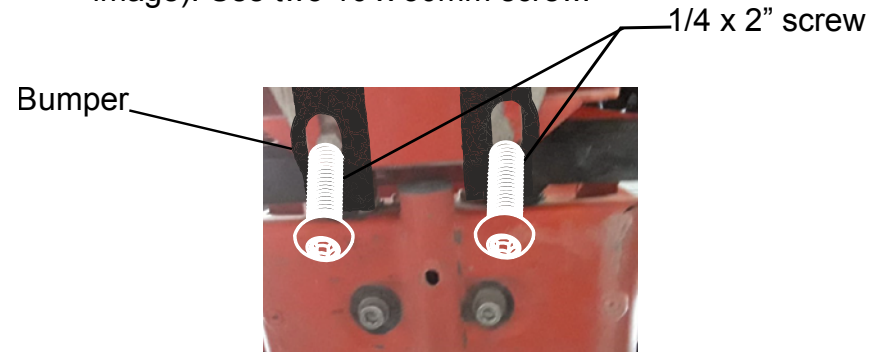

7 Install the aluminum plate (as it is shown in the image). Use four 1/4x 1" screws with washer and nuts.

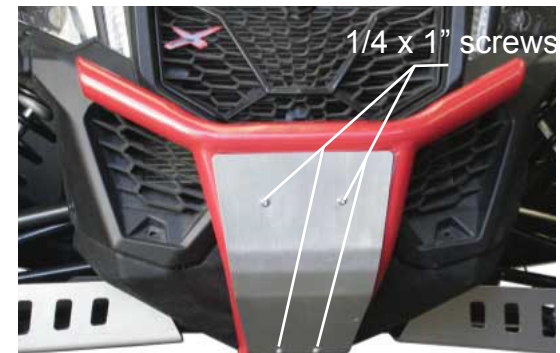

* For safety tighten all the screws.

Now you have completed the installation.